Clarke®

GAS BARBECUE

MODEL NO: BBQ4

PART NO: 6925305

USER GUIDE

INTRODUCTION

Thank you for purchasing this CLARKE product

Before attempting to use this product, please read this manual thoroughly and follow the instructions carefully. In doing so you will ensure the safety of yourself and that of others around you, and you can look forward to your purchase giving you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

SPECIFICATION

MODEL NUMBER	BBQ4
PART NUMBER	6925305
HEAT OUTPUT :	Grill 3 x 3.1 kw 223g x hr (Propane) Side Burner 1 x 3.1 kw 223g x hr (Propane)
OPERATING PRESSURE	37 mbar
APPLIANCE CATEGORY	13+
DIMENSIONS (LxWxH)	1350 x 580 x 1220 mm
WEIGHT	34.8 kg

WARNING AND SAFETY POINTS

Please read the following points before using your barbecue.

1. Please follow all assembly instruction in this manual; failure to follow these instructions may result in serious bodily injury and/or property damage.
2. This barbecue will become very hot when in use; care is to be taken especially when pets, children or elderly people are present.
3. Do not use or store any flammable liquids or vapours in the vicinity when operating the barbecue.
4. In the event of a gas leak, shut off the gas to the barbecue, extinguish any open flames and open the lid, if the leak continues check for damage, poor connection etc.
5. Do not use a naked flame to check for gas leaks.
6. Do not operate barbecue if there is a gas leak.
7. Do not attempt to disconnect any gas fitting if your barbecue is being used, this includes the Gas Hose and Regulator.
8. The barbecue should be cleaned on a regular basis. Take care not to enlarge burner ports or any openings when cleaning the burner or valves.
9. Do not use this barbecue in an enclosed area.
10. We recommend keeping the barbecue at least 1.0 meter clear of any combustible materials.
11. We would recommend that this barbecue should be serviced at least once a year by a competent engineer. Do not attempt to service this appliance yourself.
12. Do not attempt to modify or make any adjustment of the main controls on this barbecue, i.e. gas taps, injectors, valve etc.
13. Stand your barbecue on a safe, level surface, away from inflammable items such as wooden fences or overhanging trees.
14. Never use your barbecue indoors.
15. Once alight do not move your barbecue or leave it unattended.
16. Keep children and pets at a safe distance from the barbecue.
17. Keep a fire extinguisher handy.
18. Remember that hot fat may drip out from the bottom of the barbecue. Make sure the hose is clear of any fat.
19. The barbecue will become hot when in use, so wear oven gloves to handle the lid etc.
20. Ensure that the barbecue has completely cooled down before storing.
21. Never light a barbecue with gasoline or similar liquids.
22. Always turn off the gas supply after use.
23. Do not store the LPG bottle inside the barbeque.

PARTS LIST

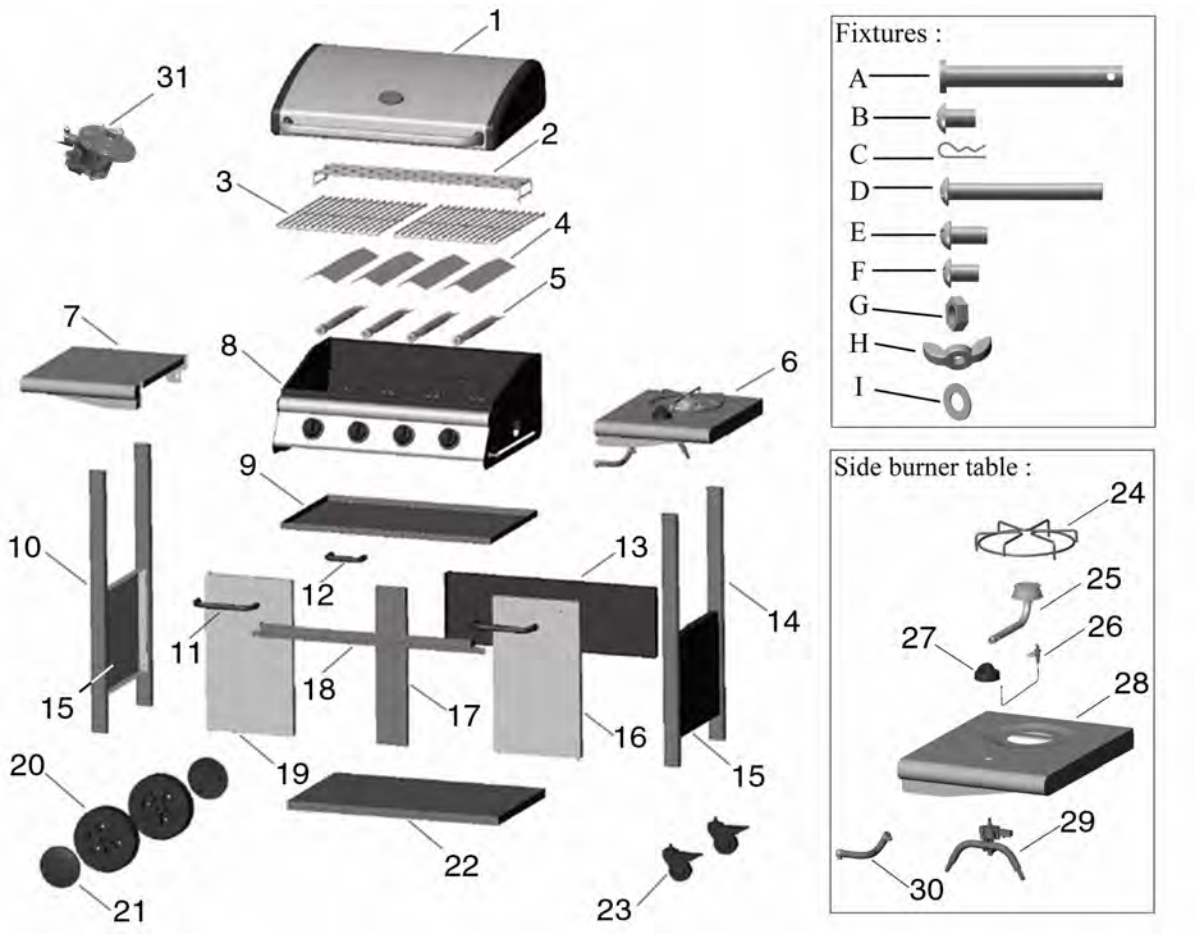

NO	DESCRIPTION	PART NUMBER	NO	DESCRIPTION	PART NUMBER
1	Lid	ELBBQ401	21	Wheel Cap	ELBBQ421
2	Warming Rack	ELBBQ402	22	Bottom Shelf	ELBBQ422
3	Cooking Grill	ELBBQ403	23	Castor	ELBBQ423
4	Flame Diffuser Plate	ELBBQ404	24	Side Burner Grid	ELBBQ424
5	Main Burner	ELBBQ405	25	Side Burner	ELBBQ425
6	Side Burner Table	ELBBQ406	26	Spark Electrode	ELBBQ426
7	Left Side Table	ELBBQ407	27	Knob	ELBBQ427
8	Grill Body	ELBBQ408	28	Side Burner Table	ELBBQ428
9	Drip Tray	ELBBQ409	29	Side Burner Valve	ELBBQ429
10	Leg A	ELBBQ410	30	Gas Hose	ELBBQ430
11	Door Handle	ELBBQ411	31	Clip on Regulator	ELBBQ431
12	Tray Handle	ELBBQ412	A	Wheel Pin	ELBBQ4FP
13	Back Panel	ELBBQ413	B	M8×21 Bolt	ELBBQ4FP
14	Leg B	ELBBQ414	C	R-clip	ELBBQ4FP
15	Side Panel	ELBBQ415	D	M5×60 Bolt	ELBBQ4FP
16	Right Door	ELBBQ416	E	M5×10 Bolt	ELBBQ4FP
17	Middle Plate	ELBBQ417	F	M4×8 Bolt	ELBBQ4FP
18	Door Stop Bar	ELBBQ418	G	M5 Nut	ELBBQ4FP
19	Left Door	ELBBQ419	H	Butterfly Nut	ELBBQ4FP
20	Wheel	ELBBQ420	I	Washer	ELBBQ4FP

ASSEMBLY

TIPS

- Remove all parts from the box and check if anything is missing according to the "Parts List" on page 4.
- To assemble your barbecue you will need: a screwdriver, pliers and an adjustable wrench.
- Assemble all nuts and bolts loosely at first. Tighten all connections once fully assembled. This increases the stability of your barbecue.

1. Connect Legs A (10) and Leg B (14) to Side Panels (15) as shown using 8 x Bolts (E).

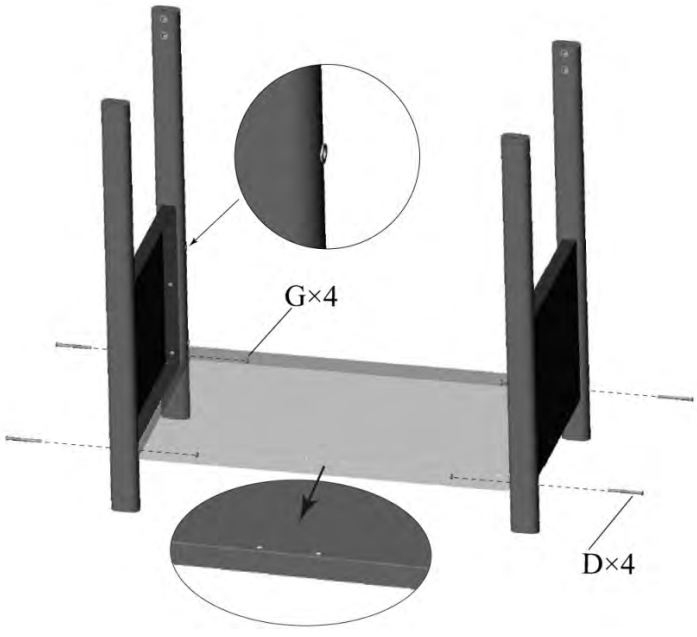

2. Secure the Bottom Shelf (22) to the legs using 4 x Bolts (D) and 4 x Nuts (G).

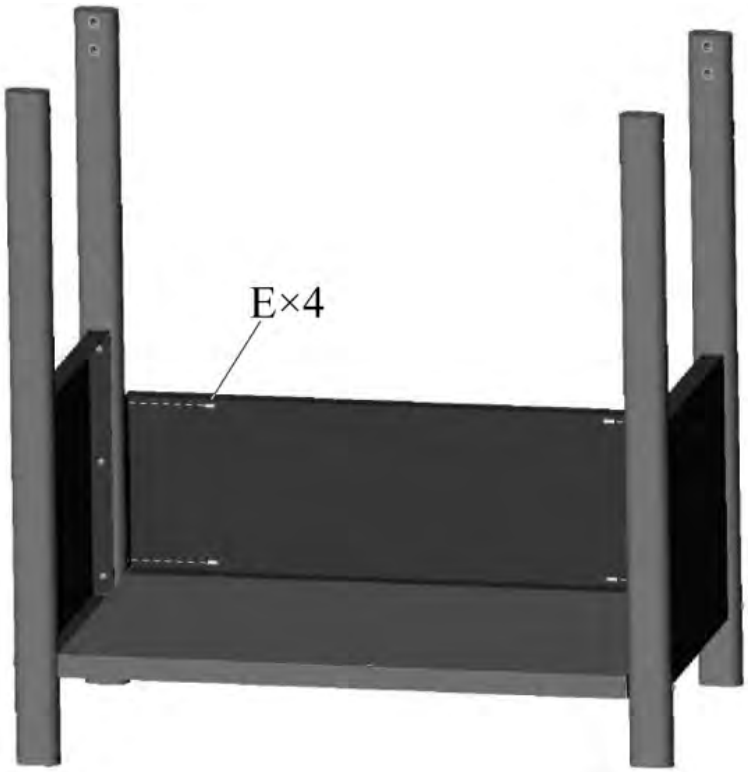

3. Fit the back panel (13) into position and secure in place using 4 x Bolts (E).

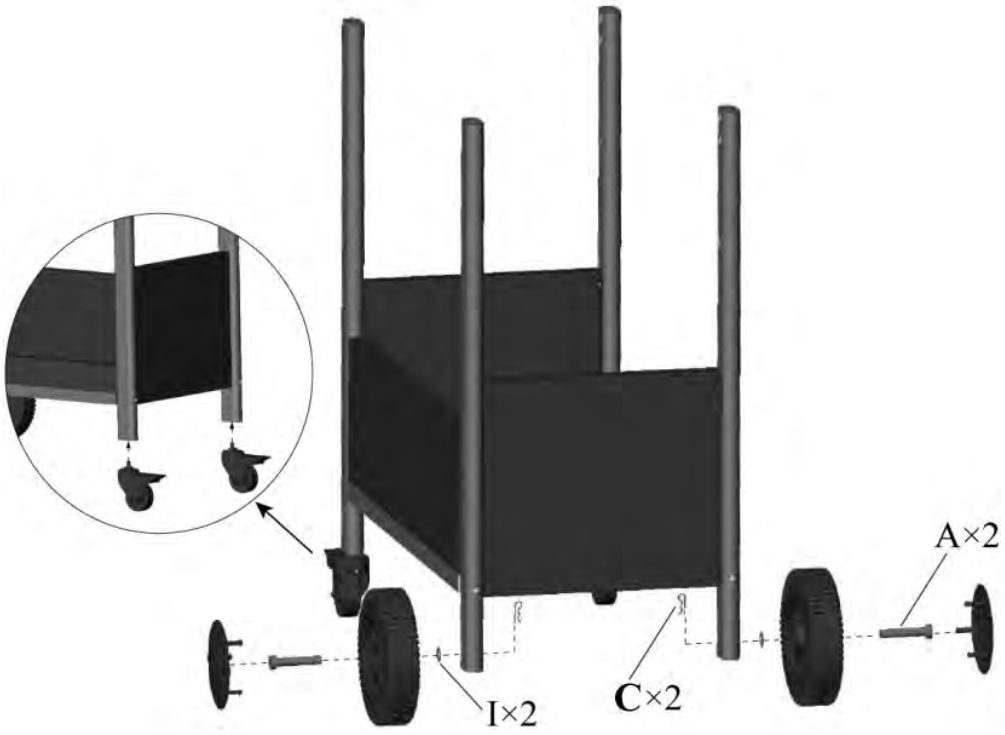

4. Fit both Wheels, by sliding the Wheel Pin (A) through the wheel (20) and washer (I) then through Leg B (14) and locking the wheel in place using the R-Clip (C) supplied.
5. Clip the Wheel Cap (21) into position.
6. Screw the Castors (23) into the bottom of Leg A (10).

7. Fit the Door Stop Bar (18) as shown and secure in place using 2 x Bolts (E).

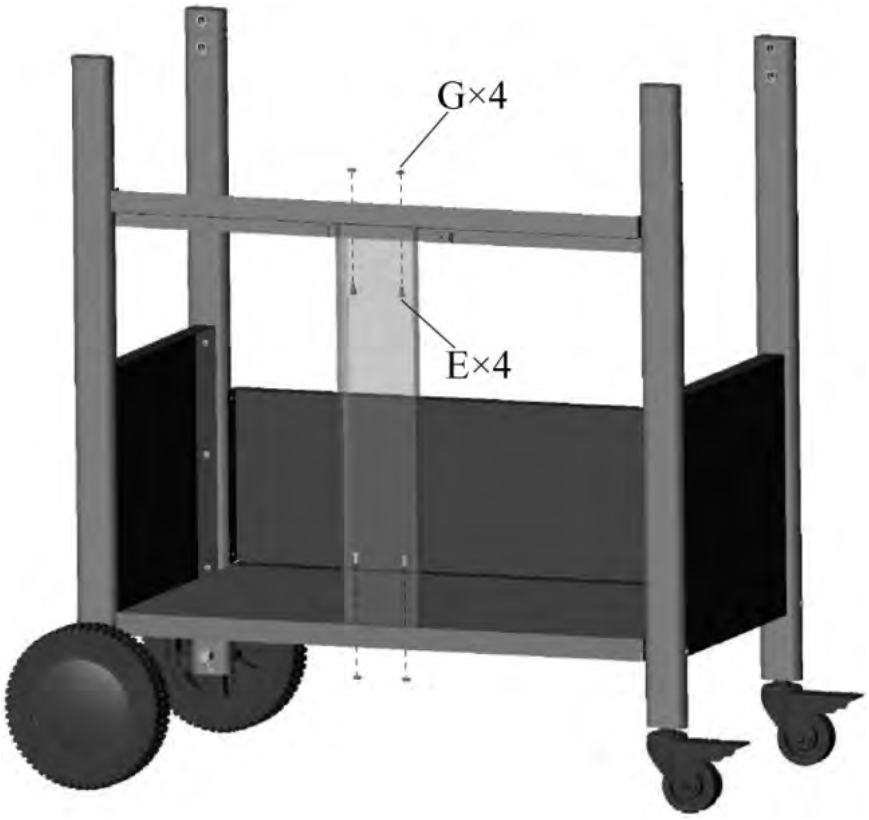

8. Fit the Middle Plate (17) as shown and secure in place using 4 x Nuts (G) and 4 x Bolts (E).

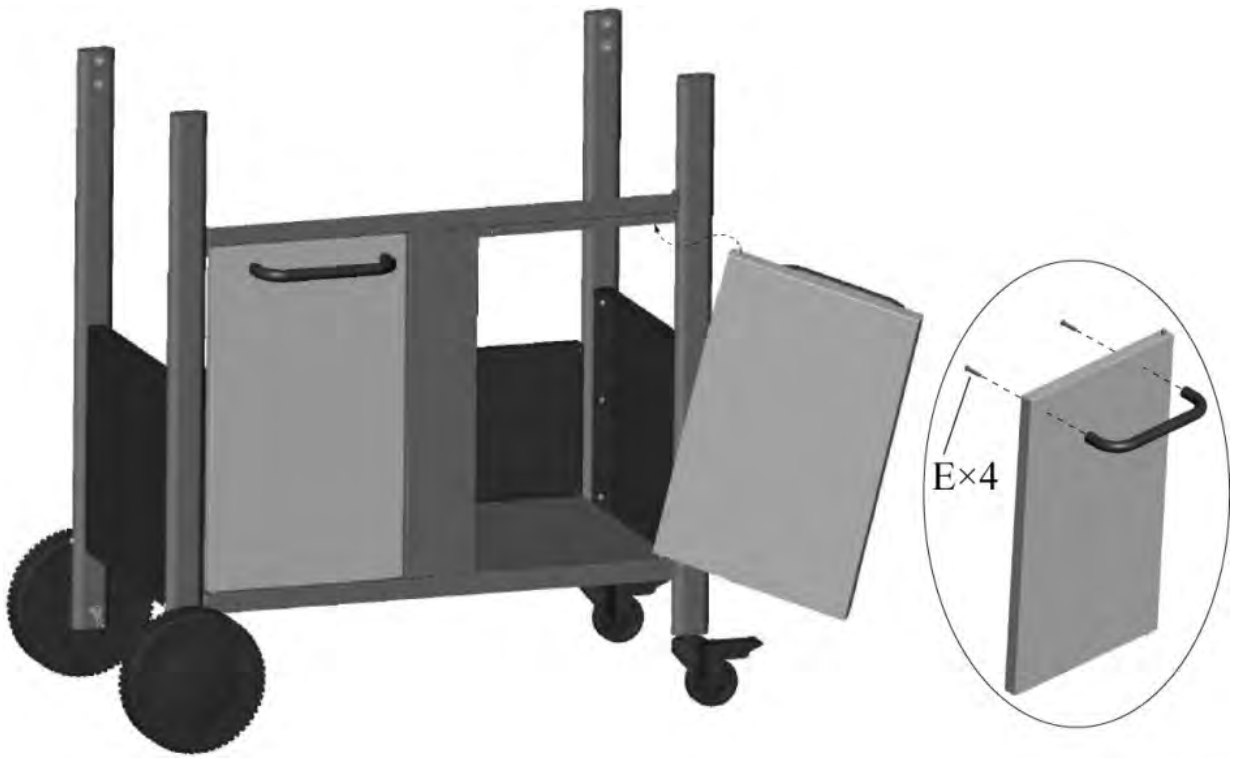

9. Fit the Door Handles (11) to the Doors (16 & 19) using 4 x Bolts (E).
10. Fit the Doors into position as shown.

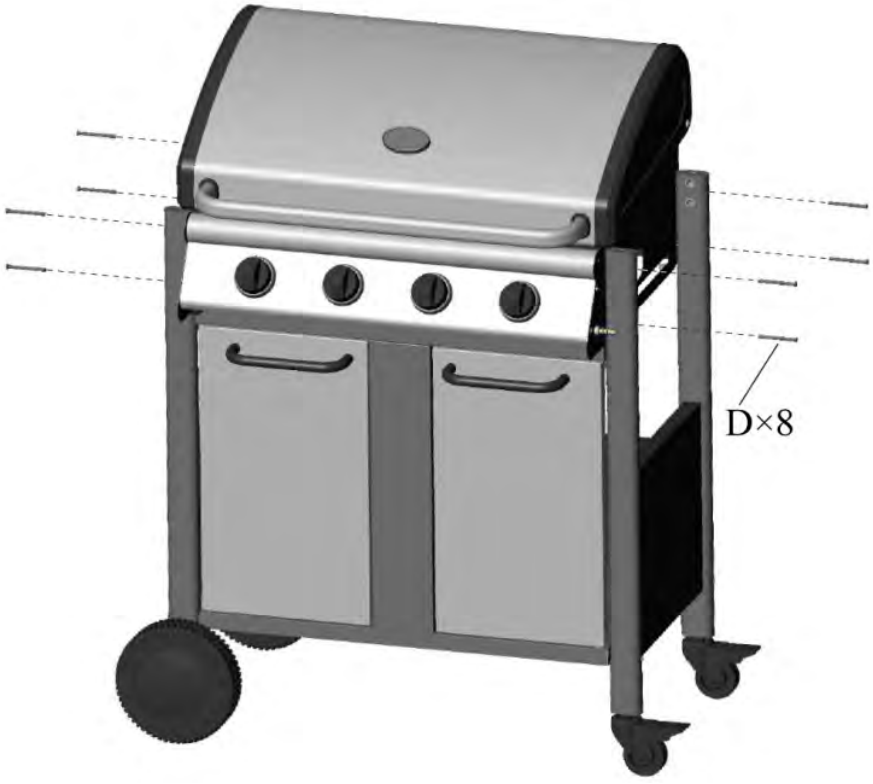

11. Get someone to help lift and position the Grill Body (8) as shown above.
12. Secure in position using 8 x Bolts (D).

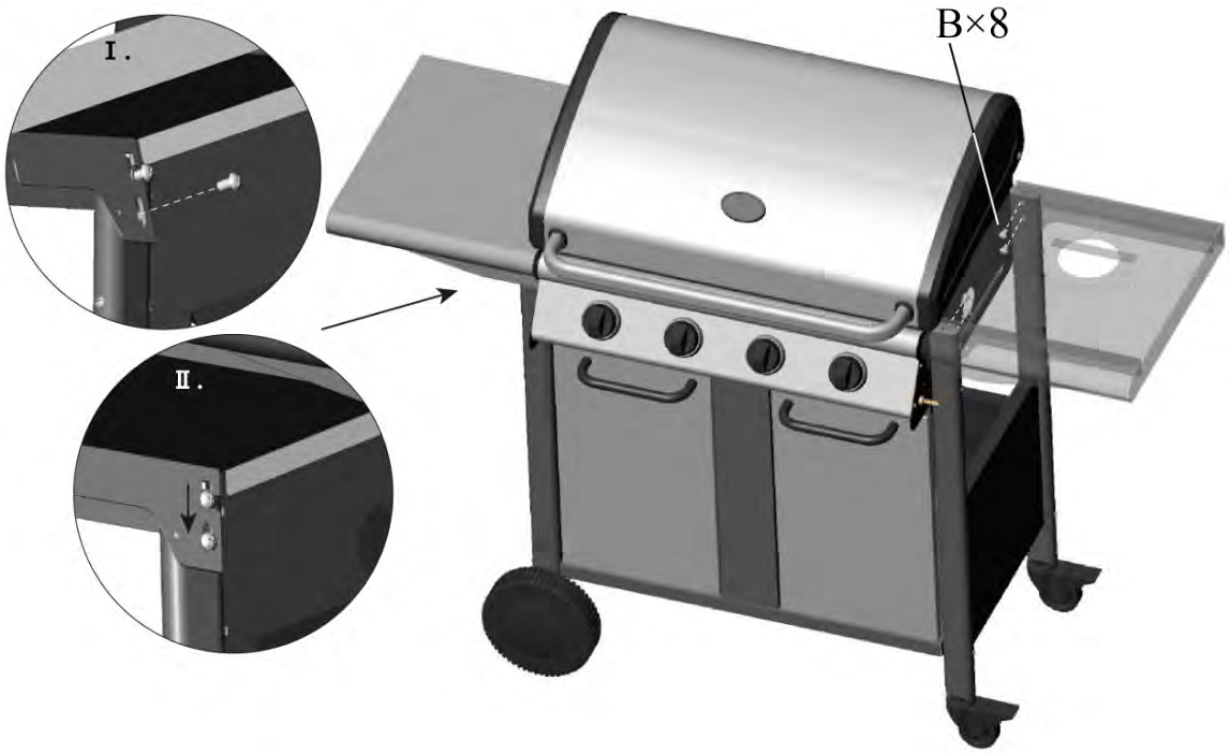

13. Fit the Left Side Table (7) and Side Burner Table (6) and fix in place using 8 x Bolts (B).

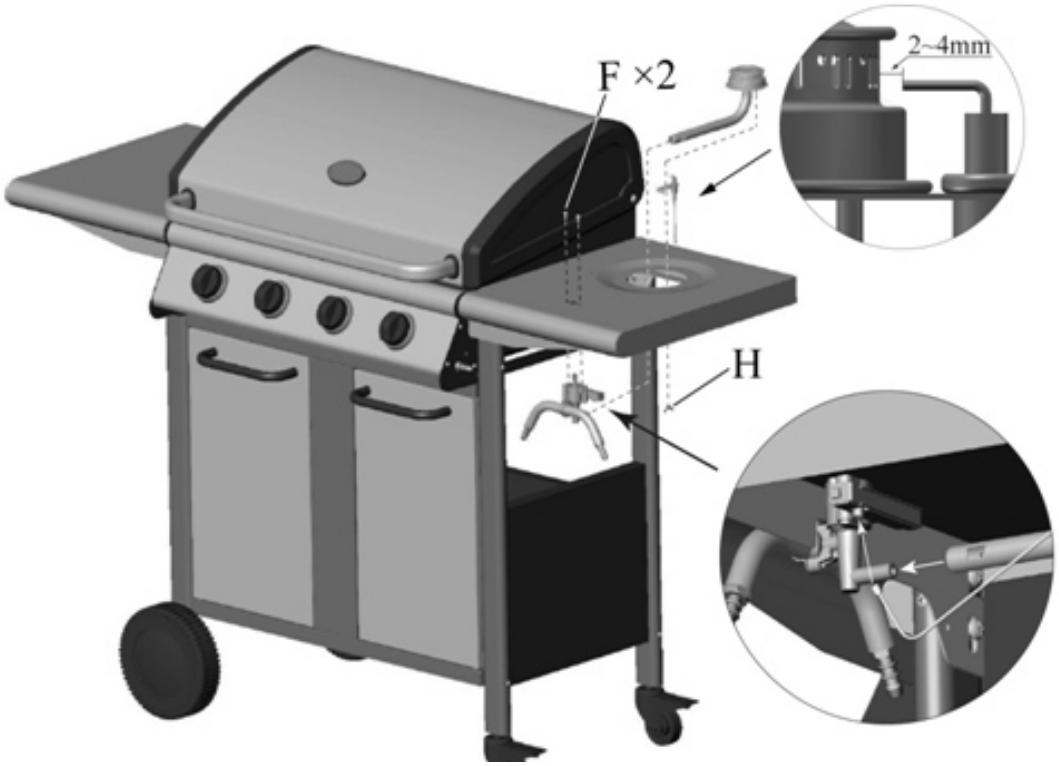

14. Fit the Spark Electrode (26), Side Burner Valve (29) and Side Burner (25) as shown.
    - Ensure all connections are secure using Bolt (F) and Wingnut (H).

15. Place the Knob (27) and Side Burner Grid (24) into position.
16. Connect the Gas Hose (30) as shown.

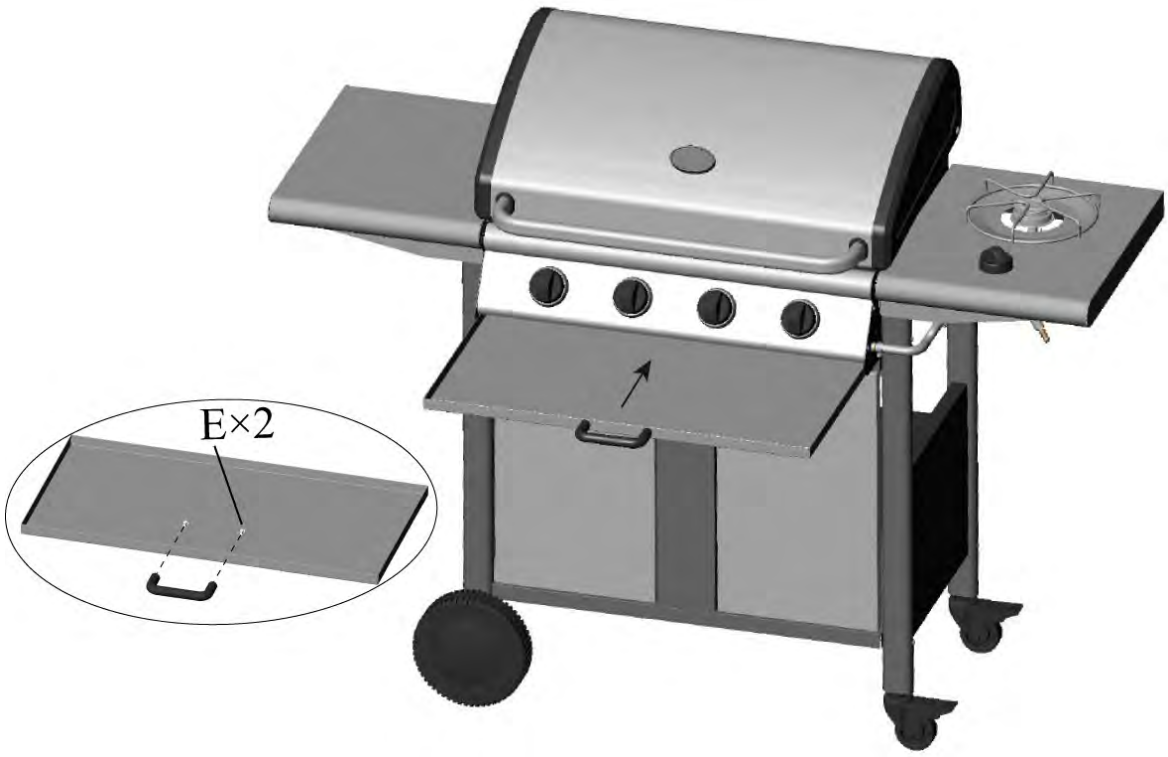

17. Connect the Tray Handles (12) to the Drip Tray (9) and secure using 2 bolts (E).
18. Slide the Oil Tray into position as shown above.

19. Place the Flame Diffuser Plates (4), Cooking Grills (3) and Warming Rack (2) into position.
20. The Left Side Table (7) can be lowered when required.

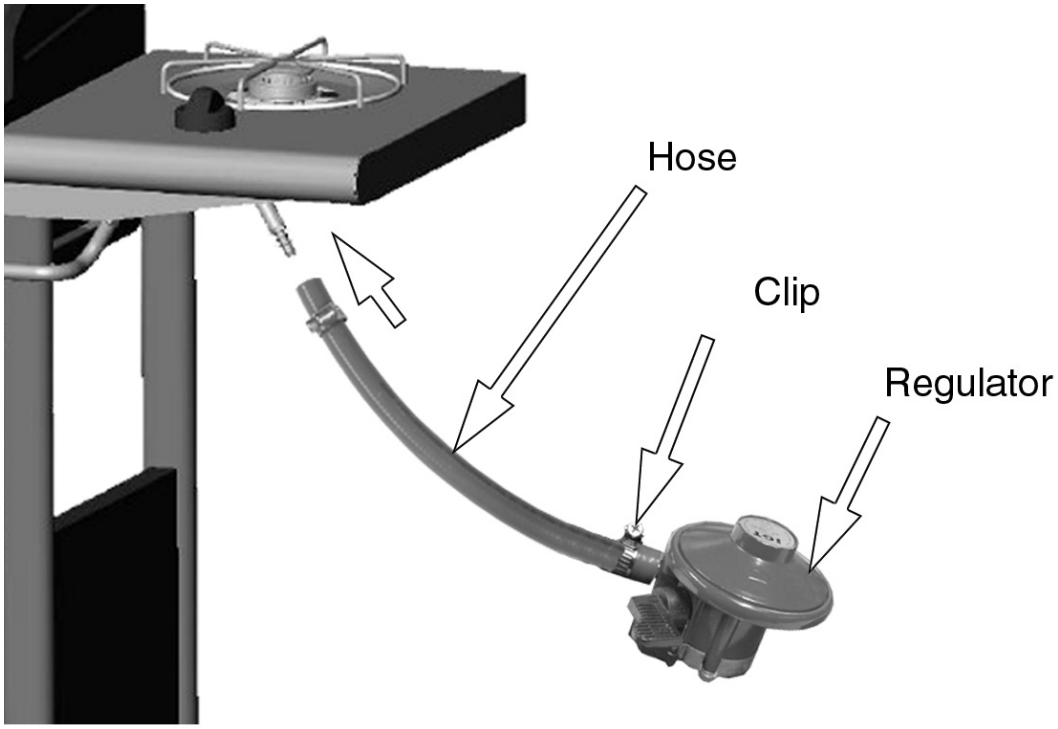

21. Connect one end of the hose onto the gas port on the BBQ and secure using one of the clips shown.
22. Connect the regulator to the other end of the hose and secure using the second clip.

BEFORE USE

CONNECTING THE GAS BOTTLE

You will need to purchase a LPG (Liquid Propane Gas) bottle to operate this barbecue. This can be obtained from your nearest gas retailer.

WARNING: NEVER LEAVE THE REGULATOR ATTACHED TO THE GAS BOTTLE IF DISCONNECTED FROM THE GAS HOSE.

1. When changing your gas bottle, ensure that there are no sources of ignition close by i.e. fires, cigarettes, naked flame etc. Make sure that the barbecue is switched off.
2. Make sure the regulator switch is in the off position (3 o'clock position) – there will be an audible 'click'.
3. Push the regulator down onto the cylinder valve and press downwards firmly until you hear the regulator 'click' into place.
4. Position the gas bottle at the side of your barbecue, not underneath.
   - The bottle must be kept away from heat.
   - NEVER STORE THE GAS BOTTLE INSIDE THE COMPARTMENT.
   - Ensure that the hose is free from any kinks or bends which will affect the gas flow.
   - The hose must not have undue tension and must not touch any part of the barbecue which may be hot.
5. Check for leaks (see below)

DISCONNECTING THE GAS BOTTLE

1. Turn the regulator switch clockwise to the off position.
2. Press the button beneath the regulator switch to remove the regulator from the gas bottle.

GAS LEAK TEST

WARNING: NEVER USE A NAKED FLAME TO DO THE LEAK TEST.

Always do a gas leak test before you use the barbecue. Test for leaks on all connections as follows:

1. Connect the LPG bottle to the barbecue and close all the valves by turning the control knobs to "OFF" position.
2. Put soapy water on all of the gas connections.
3. Open the gas valve on the LPG bottle.
4. Set the regulator switch to the on position (straight up).
   - If bubbles are seen, tighten the connection, if the bubbles are still seen, goes to your retailer for help. Never use a barbecue that is leaking gas.
5. Clear all soapy water on the connections after testing using a wet towel.
   - This MUST be done when first connecting the barbecue and every time the gas bottle is changed.

LIGHTING THE BBQ

WARNING: READ ALL SAFETY INFORMATION IN THIS MANUAL BEFORE LIGHTING THE BARBECUE.

1. Turn all control knobs clockwise to the OFF position.
2. Open the gas valve on the LPG bottle.
3. Set the regulator switch to the on position (straight up).
4. Lift open the barbecue lid.
5. Push and turn the control knob anticlockwise to the spark position, it will generate a spark and light the burner.
   - Try several times if the burner does not light on the first occasion.
6. If the Burner does not light, turn the control knob to the OFF position and wait 5 minutes, then repeat Step 3.
7. To adjust the flame, turn the control knob to LOW and HIGH position.
8. Turn the control knobs to the OFF position to shut down the burner.
9. The side burner control works in the same way.

NOTE:

- The lid must always be open when lighting the burner.
- Use oven gloves and sturdy, long handled barbecue tools when cooking on the grill.
- Be prepared if an accident or fire should occur. Know where your First Aid kit and fire extinguishers are and how to use them correctly.
- Keep any electrical cables and the gas supply hose away from any hot surfaces.
- The gas bottle should only be changed by a competent person.

ENERGY SAVING TIPS

- Turn the gas off as soon as you have finished cooking.
- Preheat the barbecue for 5 to 10 minutes only.
- Do not use a higher setting than required.
- Do not cook with the lid down using the maximum heat settings.

STORAGE

Your gas bottle must be stored outdoors in a well-ventilated area and must be disconnected from your barbecue when not being used. Ensure that you are outdoors and away from any sources of ignition before attempting to disconnect your gas bottle from your barbecue.

When using your barbecue after a period of storage, check for gas leaks and for any obstructions in the burner etc. before using. Also follow the cleaning instructions to ensure the barbecue is safe. If the barbecue is stored outdoors check that the barbecue is free from any obstruction (insects etc.) as this may affect the flow of air.

NEVER STORE THE GAS BOTTLE INSIDE THE COMPARTMENT.

MAINTENENCE

CLEANING INSTRUCTION

Your barbecue is easy to clean with minimum effort, just follow these helpful tips:

1. Turn the burner on to maximum for 5 to 10 minutes. Grease will be burned off from your grill as well as your Flame Diffuser Plates.
2. Ensure the barbecue is cool before continuing. Grills should be cleaned periodically by soaking and washing in soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn spots.
3. The interior surfaces of the grill body should also be washed with hot soapy water.
4. Regularly clean the Drip Tray (10) of excess oil or fat.
5. Periodically check each burner to see that it is free from insects and spiders which may block the gas system.
6. Clean each burner very carefully, checking to see it is free of obstructions. We recommend that you use a pipe cleaner to clean the burner gas holes.

DELCLARATION OF CONFORMITY

CE

Clarke®
INTERNATIONAL

Hemnall Street, Epping, Essex CM16 4LG

DECLARATION OF CONFORMITY

This is an important document and should be retained.

We hereby declare that this product(s) complies with the following directive(s):

90/396/EEC Appliances Burning Gaseous Fuels, amended by 93/68/EEC

The following standards have been applied to the product(s):

BSEN 484:1997, EN498:1997

The technical documentation required to demonstrate that the product(s) meet(s) the requirement(s) of the aforementioned directive(s) has been compiled and is available for inspection by the relevant enforcement authorities.

The CE mark was first applied in: 2010

Product Description:	Gas BBQ's (for outside use)
Model number(s):	BBQ3, BBQ4, SSBBQ4
Serial / batch Number:	N/A
Date of Issue:	23/12/10

Signed:

J.A. Clarke
Director

BBQ DOC RV1

Page 1 of 1

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS
From DIY to industrial, Plus air tools, spray guns and accesories.

GENERATORS
Prime duty or emergency standby for business, home and leisure.

POWER WASHERS
Hot and cold, electric and engine driven - we have what you need

WELDERS
Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING
Drills, grinders and saws for DIY and professional use.

WOODWORKING
Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS
Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS
Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS
Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS
All sizes for car and commercial use.

PARTS & SERVICE: 0208 988 7400
E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke® INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com